



opk E-SPACE Pocket


*Montage- und Bedienungsanleitung
Mounting- and Operating Instructions*

Inhaltsverzeichnis


Tabel of Contents

Anwendungsmöglichkeiten, Maßvorgaben, Maßberechnung	Page 1
<i>Possible applications, dimensions, dimension calculation</i>	
Türen Holz, Glas	Page 5
<i>doors wood / glass</i>	
Einstellung breite Türe	Page 6
<i>Adjustment wider door panel</i>	
Einstellung schmale Türe	Page 6
<i>Adjustment narrower door panel</i>	
Einzelne Türe	Page 8
<i>Single system</i>	
Türen synchro	Page 9
<i>double system</i>	


Track System

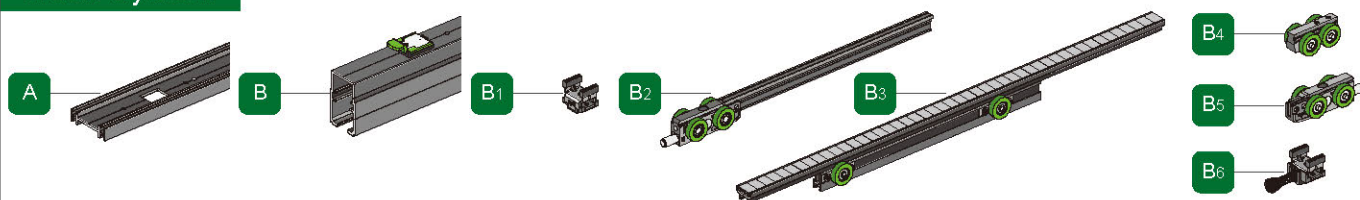


Wooden Door

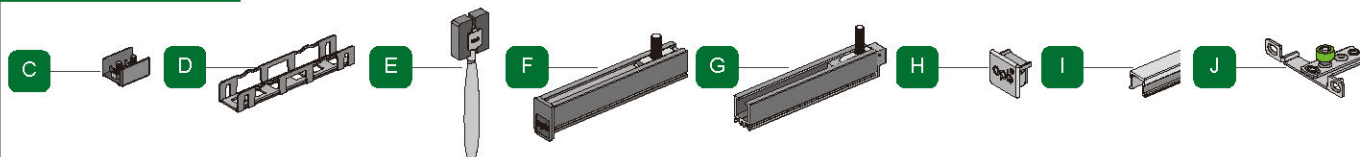


Glass Door A

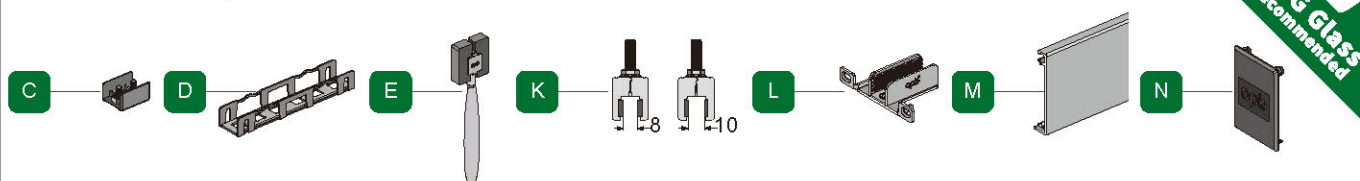


Glass Door B

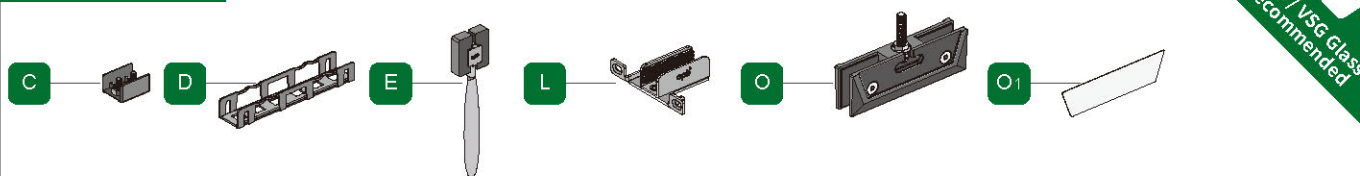


Wooden Door

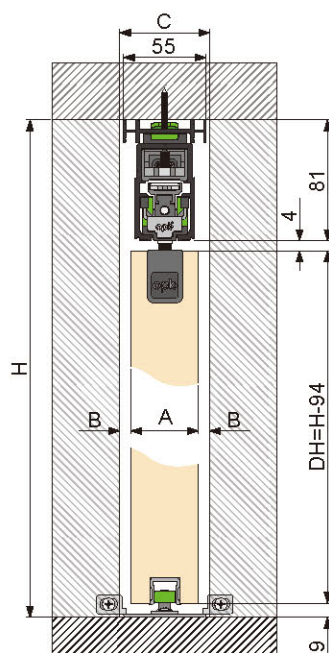

Glass door A

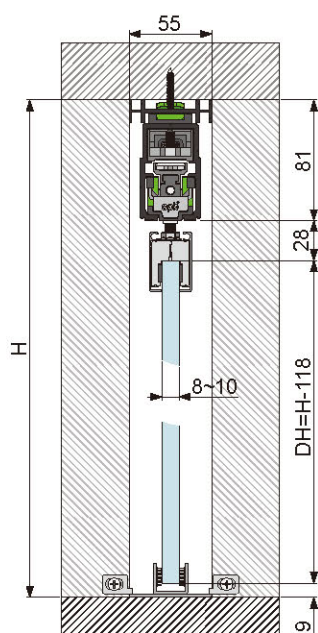


Glass door B

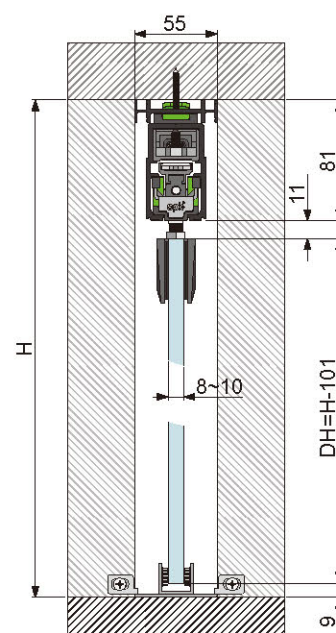



A	B	C
35mm	10mm	55mm
40mm	7.5mm	55mm
45mm	7.5mm	60mm

Single system / Schiene

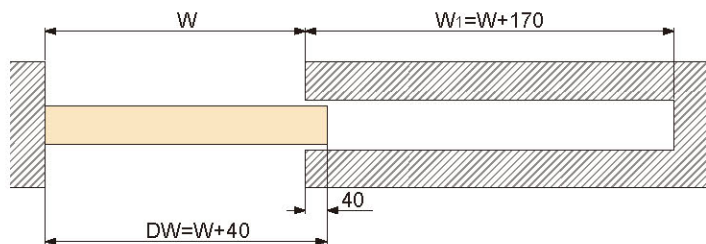

Schienenlänge L Track length L	Lichtes Einbaumaß Door opening size W	Türbreite Door width DW
2100mm	680~980mm	720~1020mm
2800mm	980~1330mm	1020~1370mm

Double systems / Schienen (synchro system)

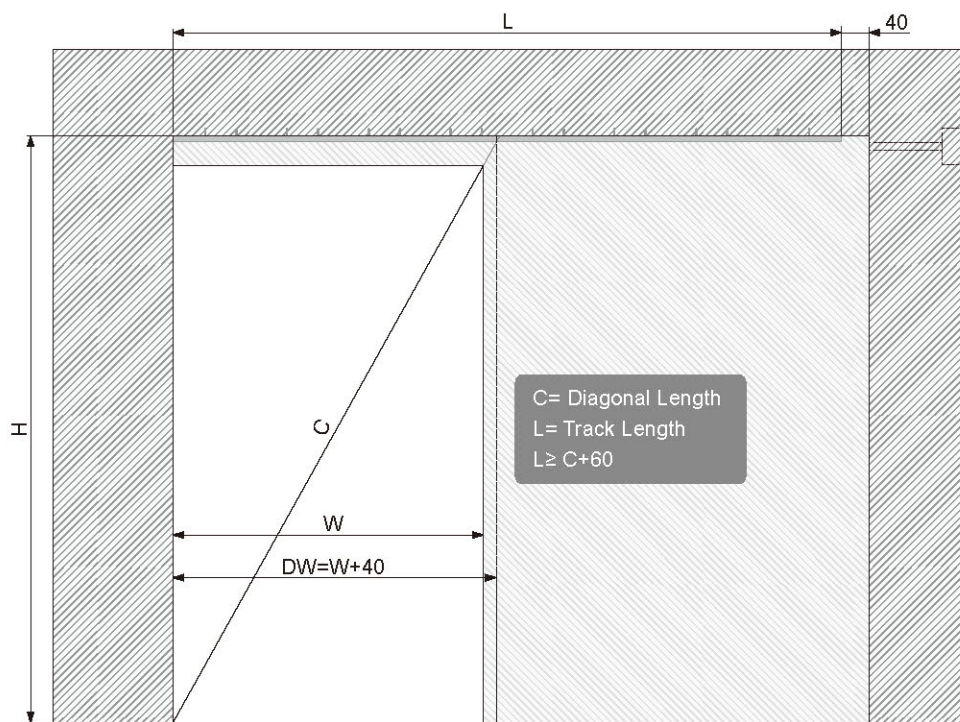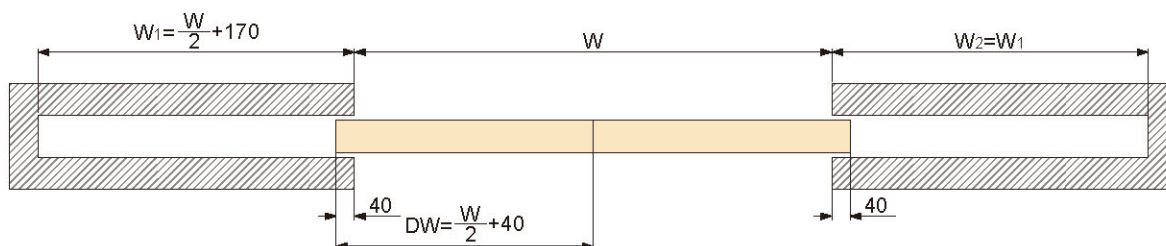

C = Diagonal Length
L = Track Length
 $L \geq C + 60$

The diagonal size of door opening $\geq$ Track length


1 Single system / Schiene

Schienenlänge L Track length L	Lichtes Einbaumaß Door opening size W
2100mm	680~980mm
2800mm	980~1330mm



$X = (L - 2W - 130) / 2$
 Note:
 W: door opening width
 L: the track length delivered
 X: the length of cutting at both sides
 L1: Track length after cutting

! When the track system and the pre-mounting track is too long, then both sides need to be cut by the same length

Track System

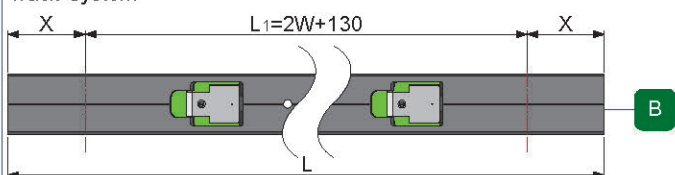

The pre-mounting track

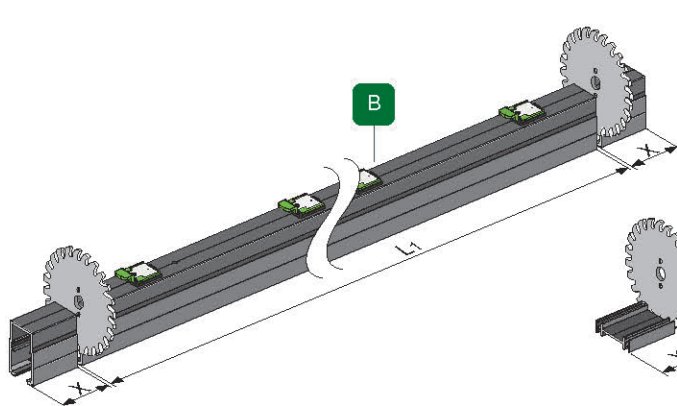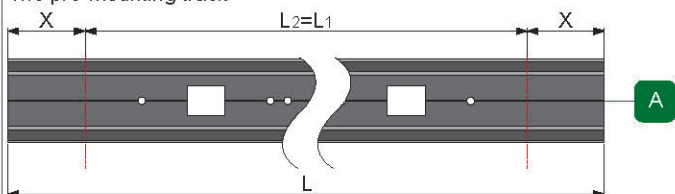


Double systems / Schienen (synchro system)

Schienenlänge L Track length L	Lichtes Einbaumaß Door opening size W
(2100x2)mm	1360~1960mm
(2800x2)mm	1960~2660mm



$X = (L - W - 130) / 2$
 Note:
 W: door opening width
 L: the track length delivered
 X: the length of cutting at both sides
 L1: Track length after cutting

! When the track system 1&2 and the pre-mounting track is too long, then both sides need to be cut by the same length




Track System 1 & 2

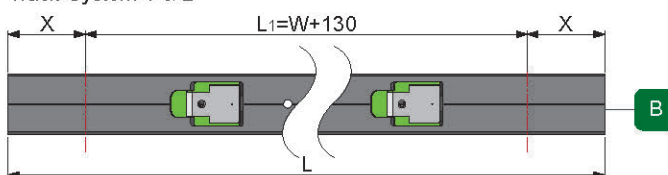

The pre-mounting track 1&2


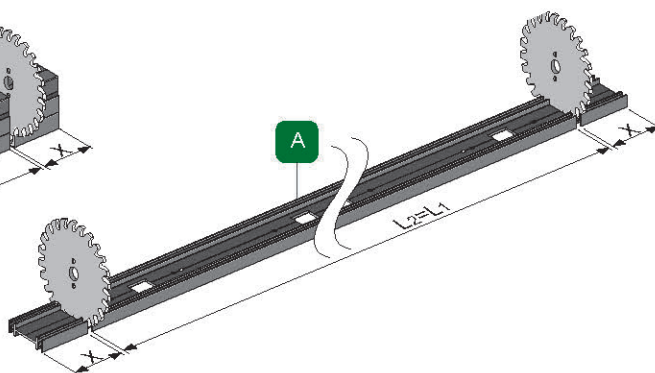
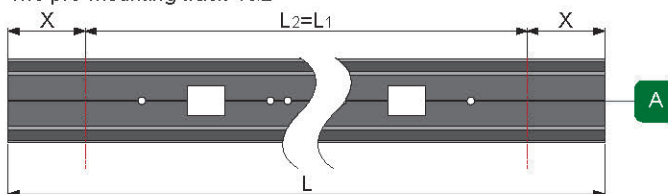


Please use the cleaning brush to clean the aluminum scraps generated after cutting the track, to keep the inside of the track clean

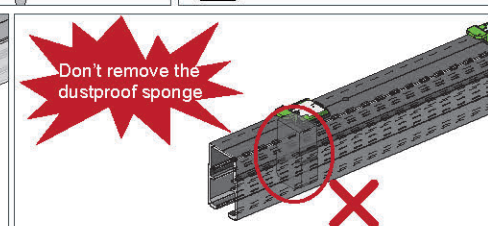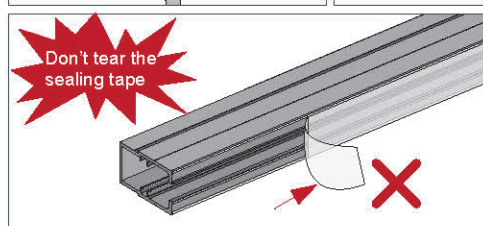
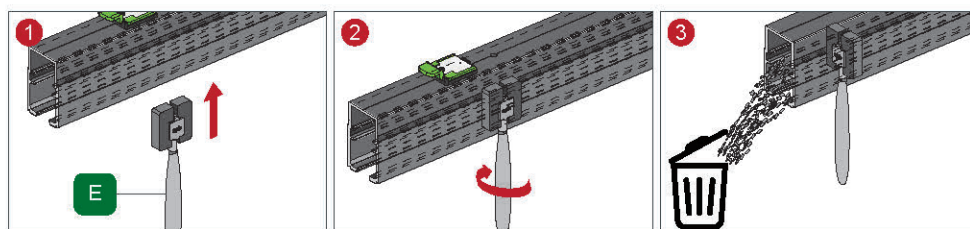


2

Wood Minimal

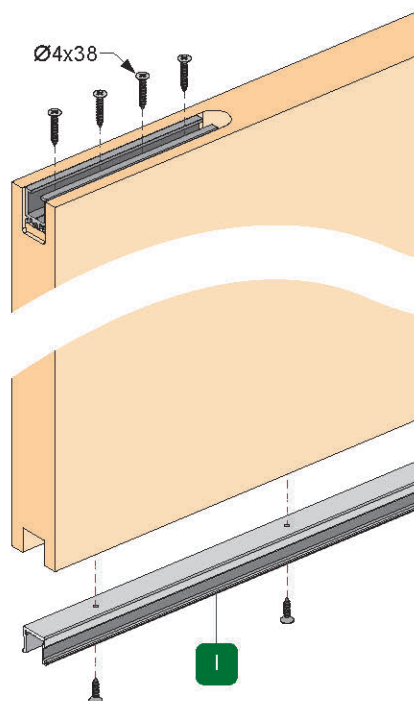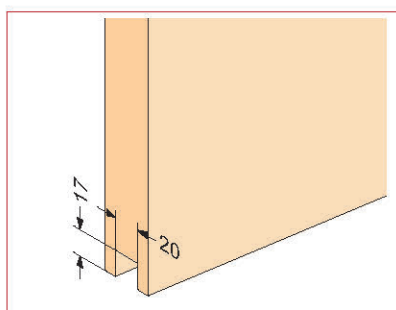
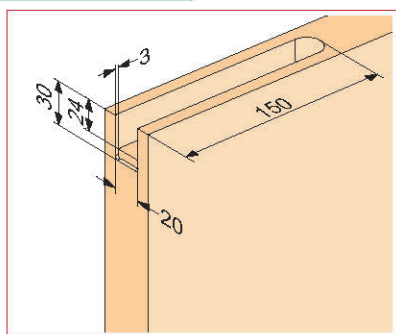


Glass door A

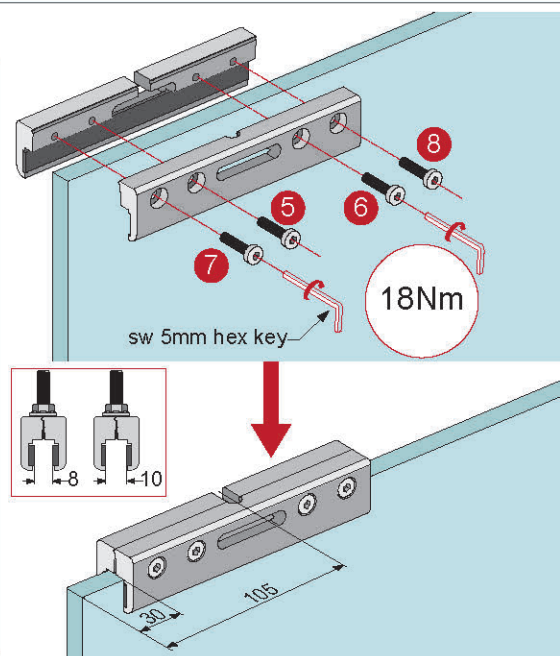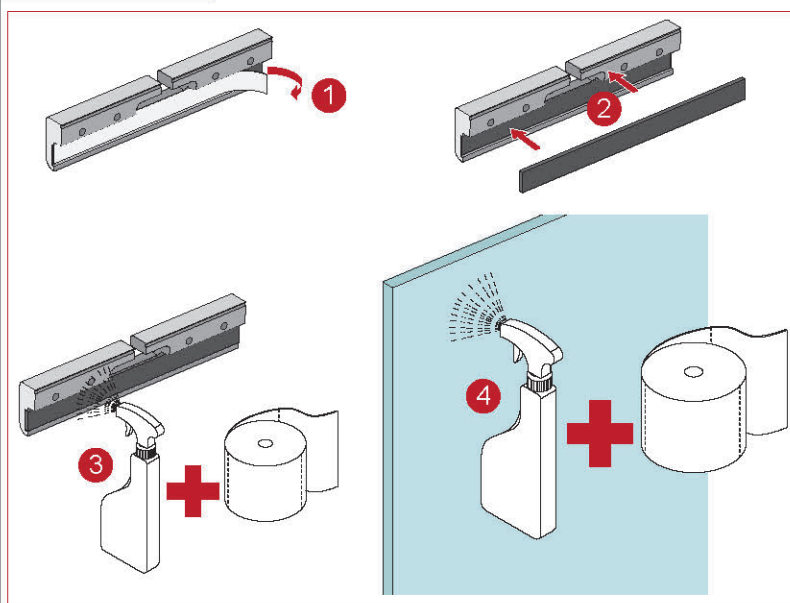


Glass door B

Glass door hole size

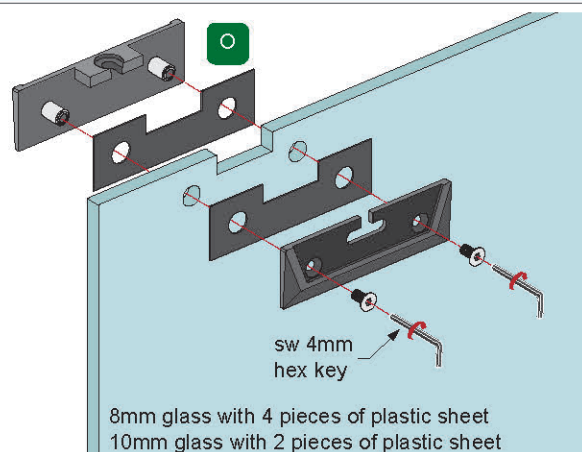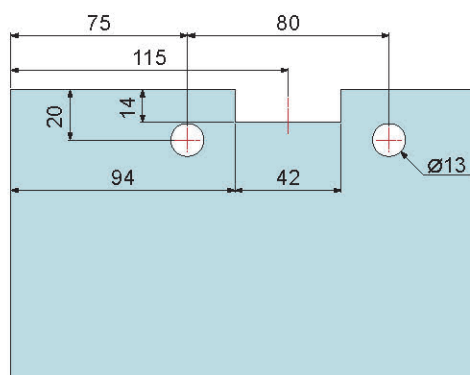


3 Install the pre-mounting track Single system / Schiene

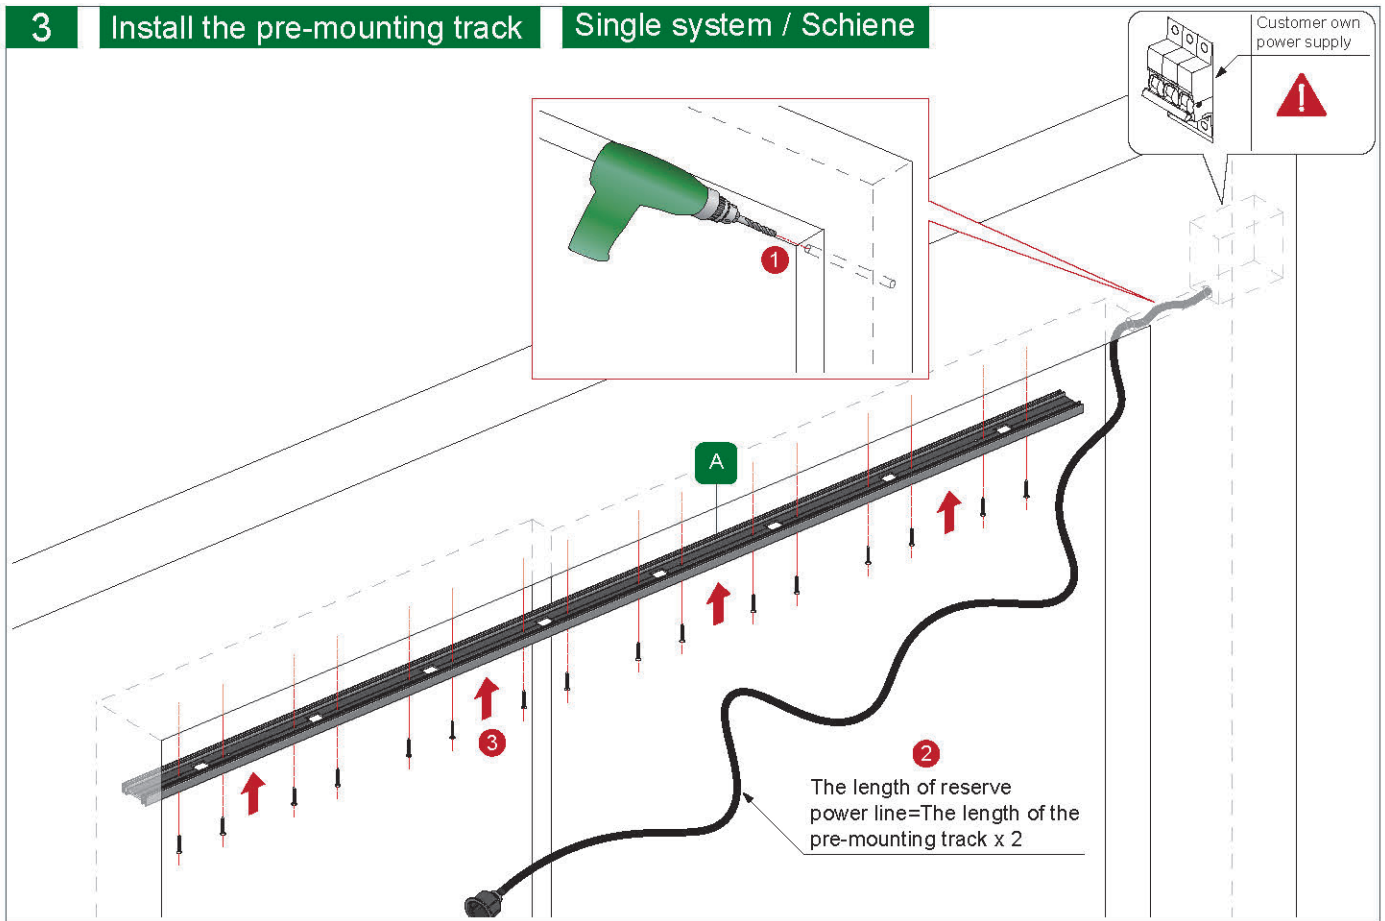


Double systems / Schienen (synchro system)

Refer to step 3 to install the pre-mounting track

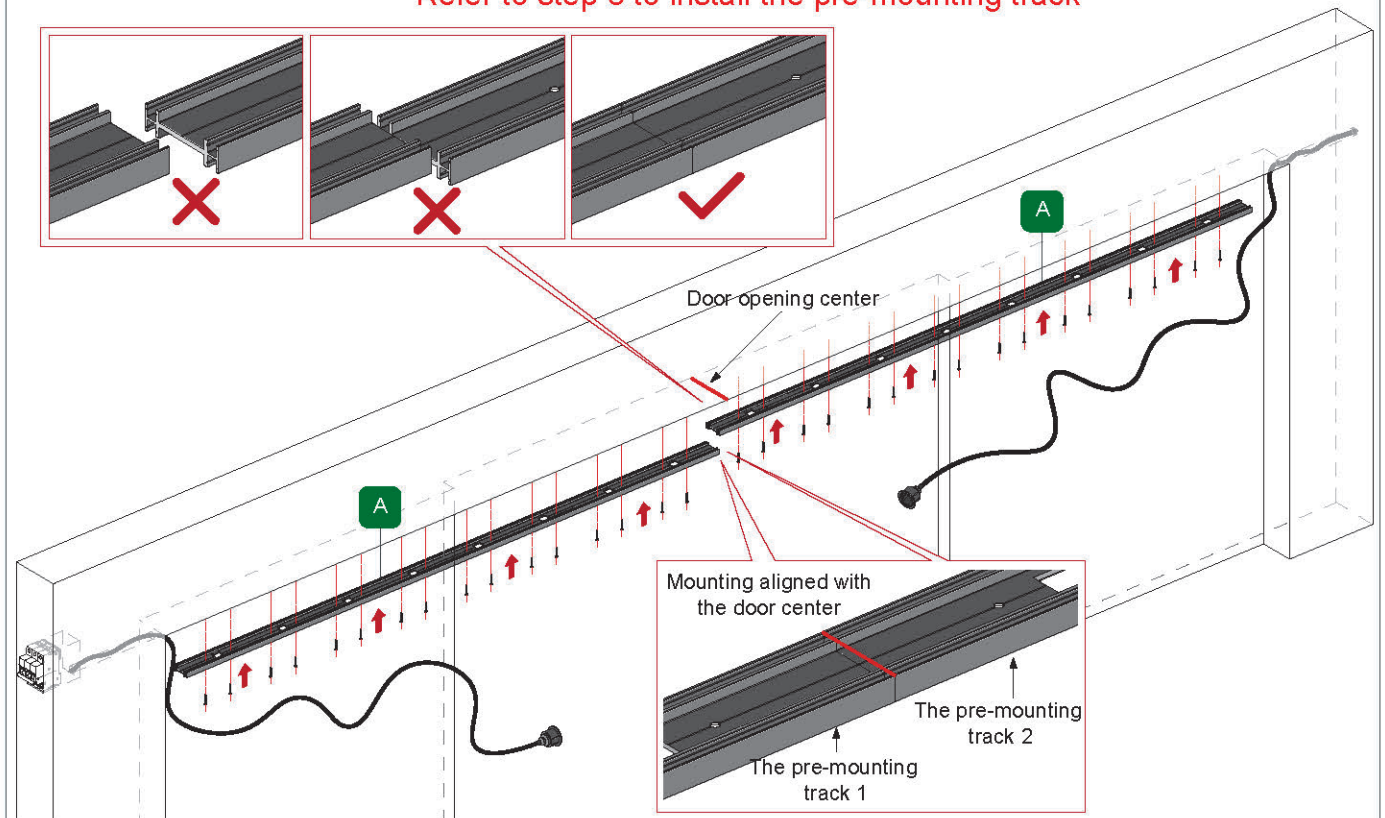


4 Clean the track

Please clean the track with a cleaning brush to keep the inside of the track clean

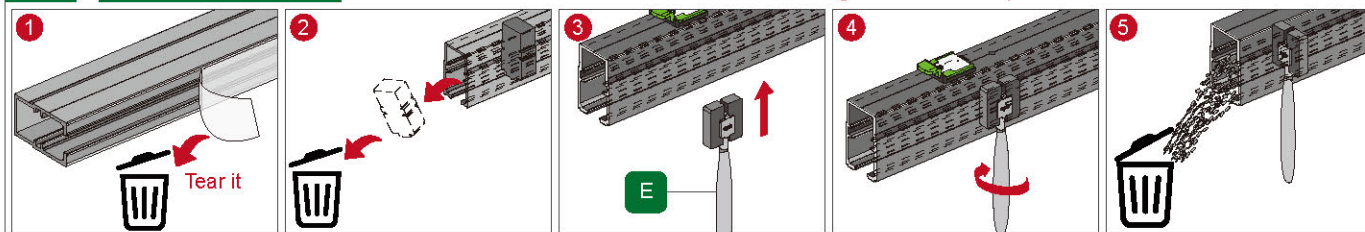


5-A Wooden Door

Install the minimal bracket

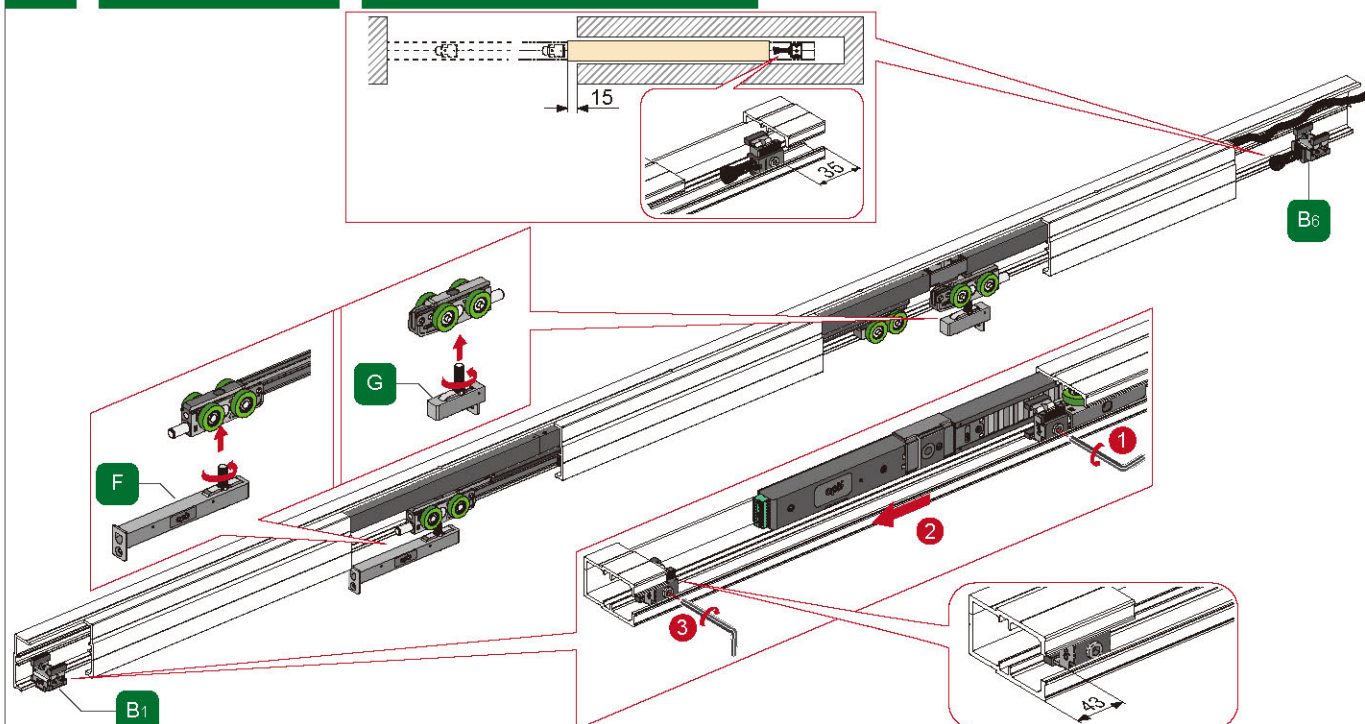



5-B Glass door A & Glass door B

Install glass clamp

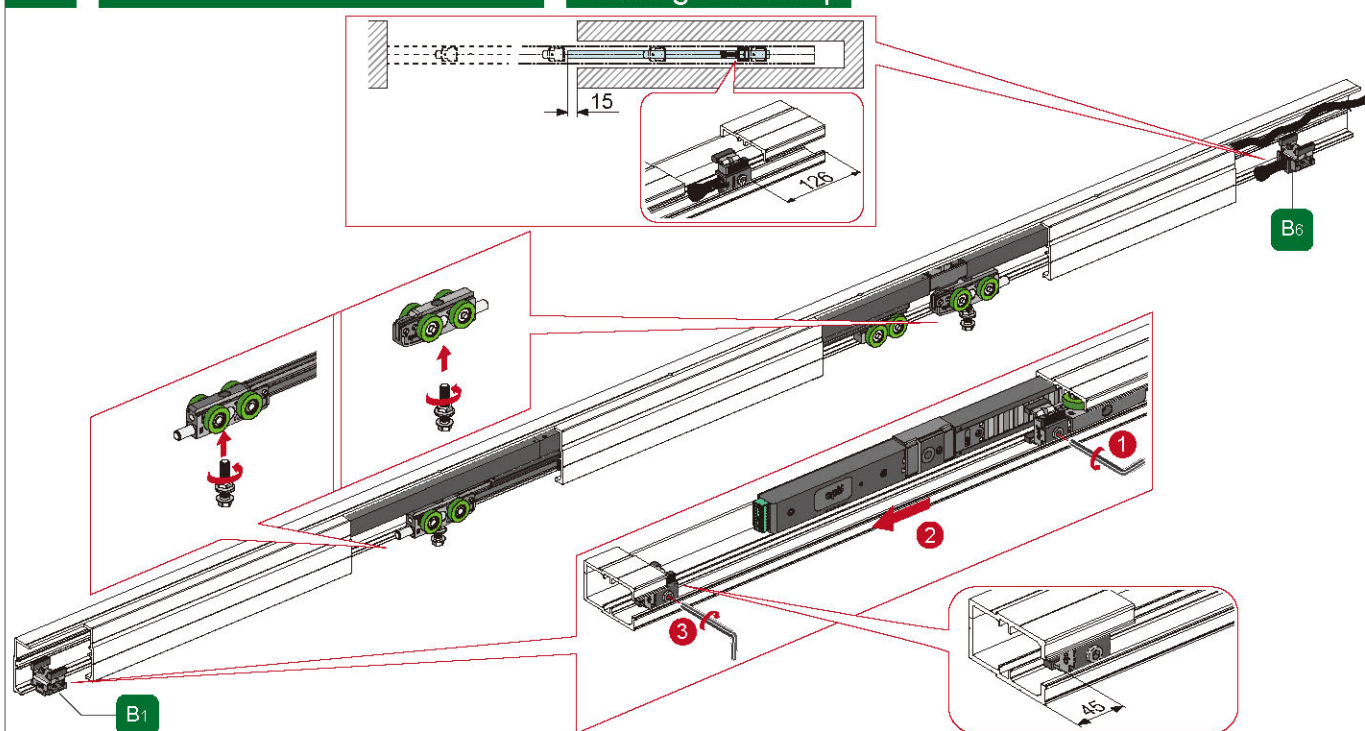



6-A Einstellung für eine breitere Tür / Adjustment for a wider door panel

Schienenlänge L Track length L	Lichtes Einbaumaß Door opening size W	Türbreite Door width DW
2100mm	680~980mm	865~1020mm
2800mm	980~1330mm	1215~1370mm

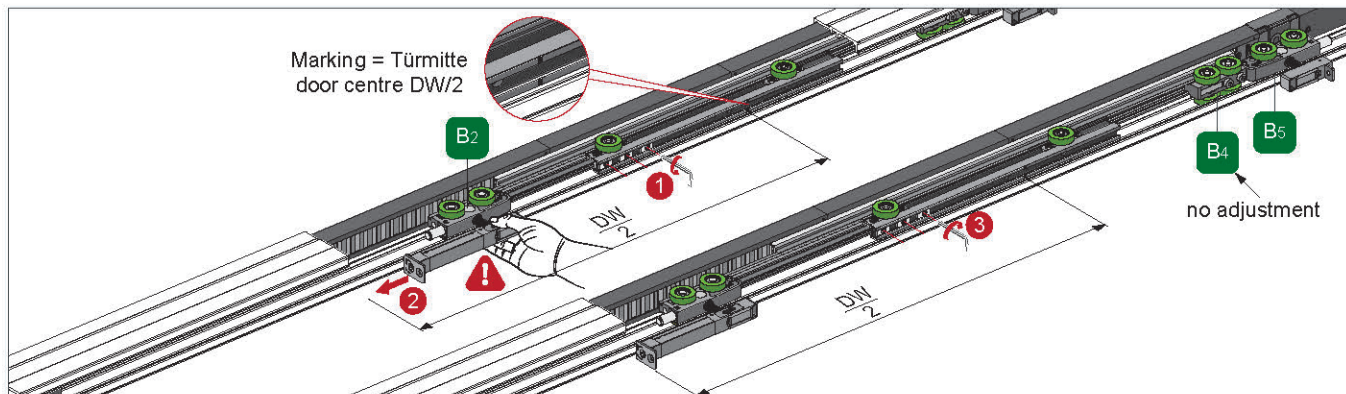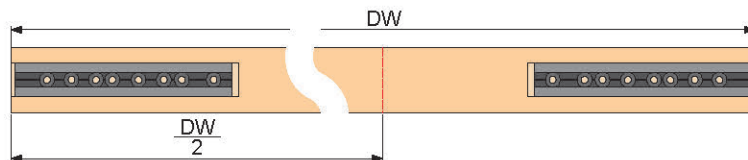



Einstellung für eine schmalere Tür / Adjustment for a narrower door panel

Schienenlänge L Track length L	Lichtes Einbaumaß Door opening size W	Türbreite Door width DW
2100mm	680~980mm	720~865mm
2800mm	980~1330mm	1020~1215mm

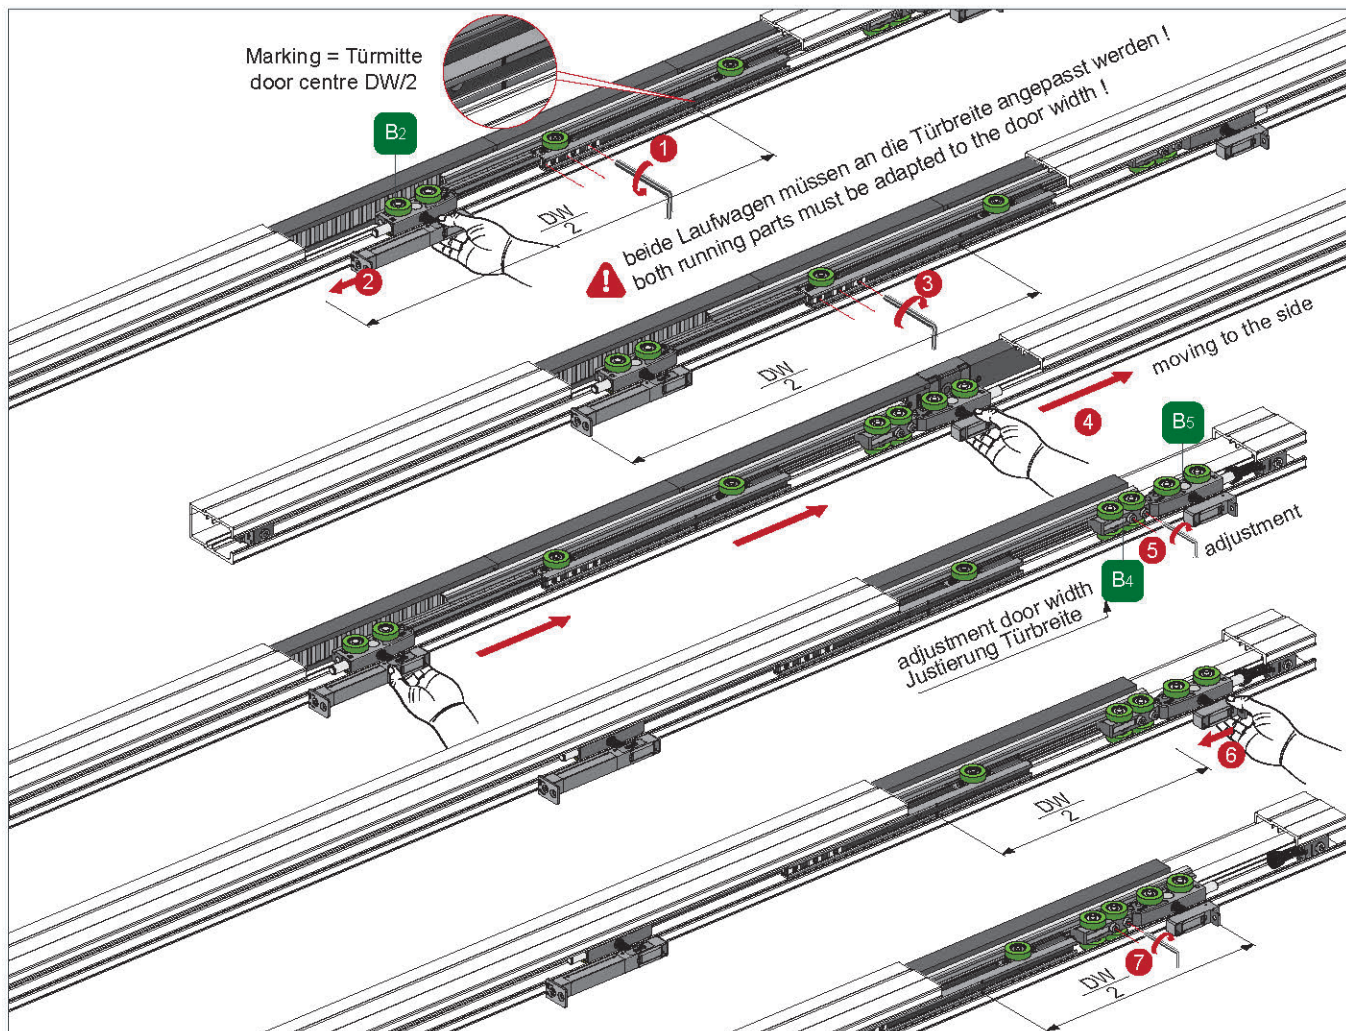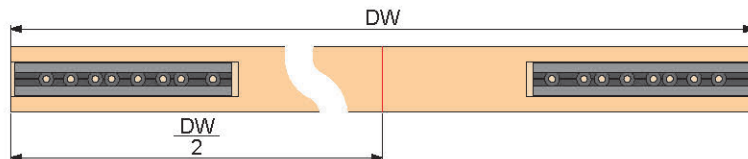



6-B Einstellung für eine breitere Tür / Adjustment for a wider door panel

Schienenlänge L Track length L	Lichtes Einbaumaß Door opening size W	Türbreite Door width DW
2100mm	680~980mm	865~1020mm
2800mm	980~1330mm	1215~1370mm

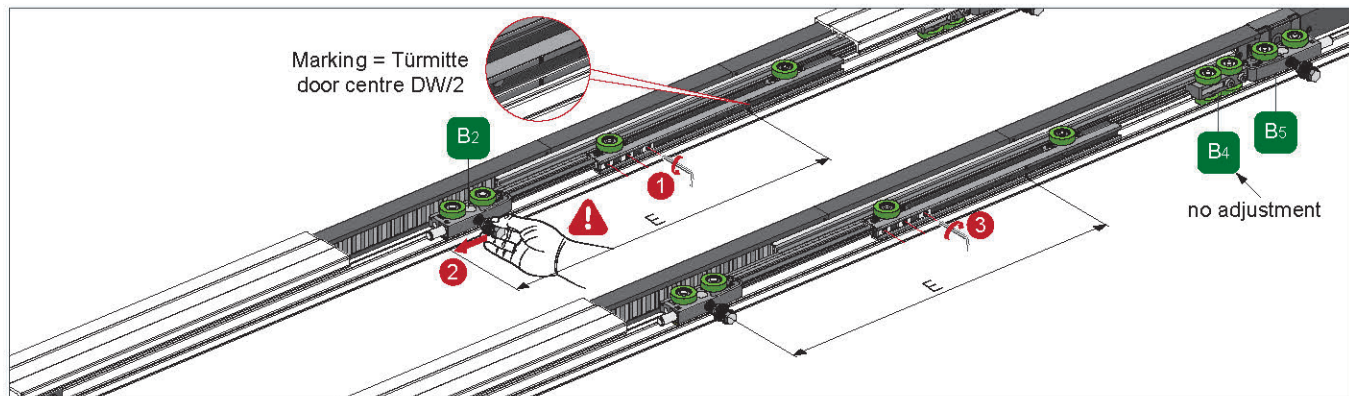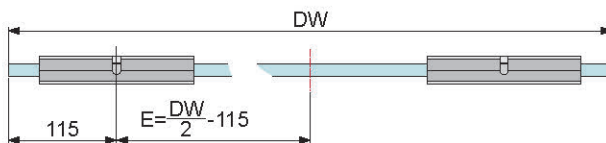


Einstellung für eine schmalere Tür / Adjustment for a narrower door panel


Schienenlänge L Track length L	Lichtes Einbaumaß Door opening size W	Türbreite Door width DW
2100mm	680~980mm	720~865mm
2800mm	980~1330mm	1020~1215mm

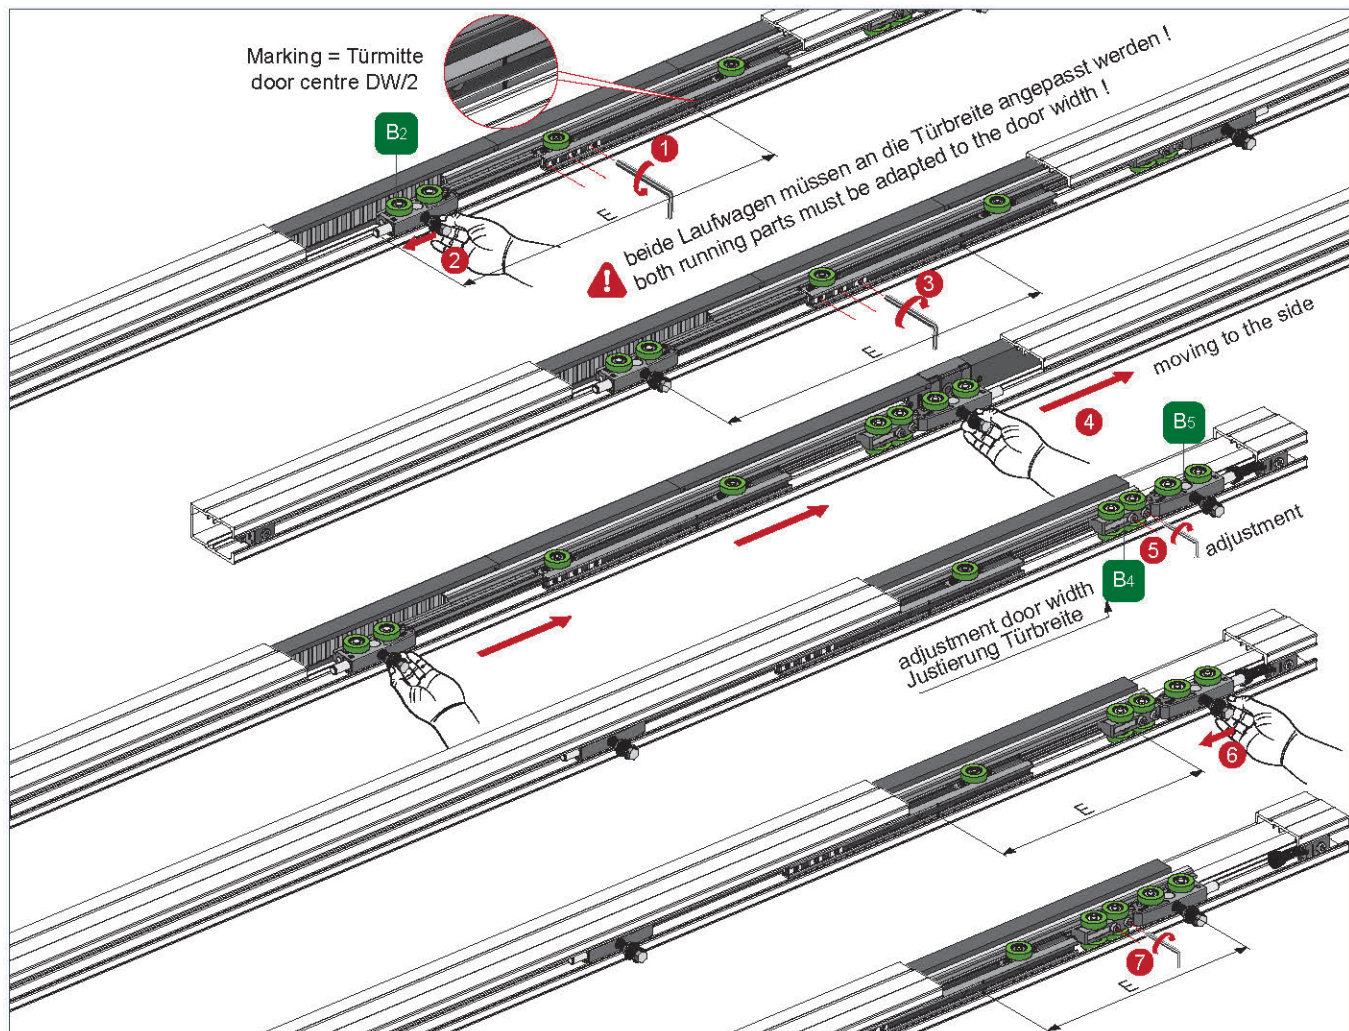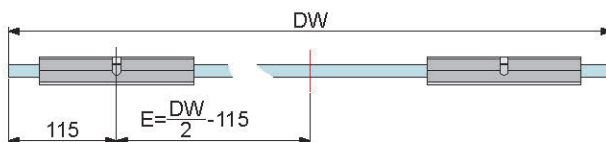


7 Install cable holder Single system / Schiene

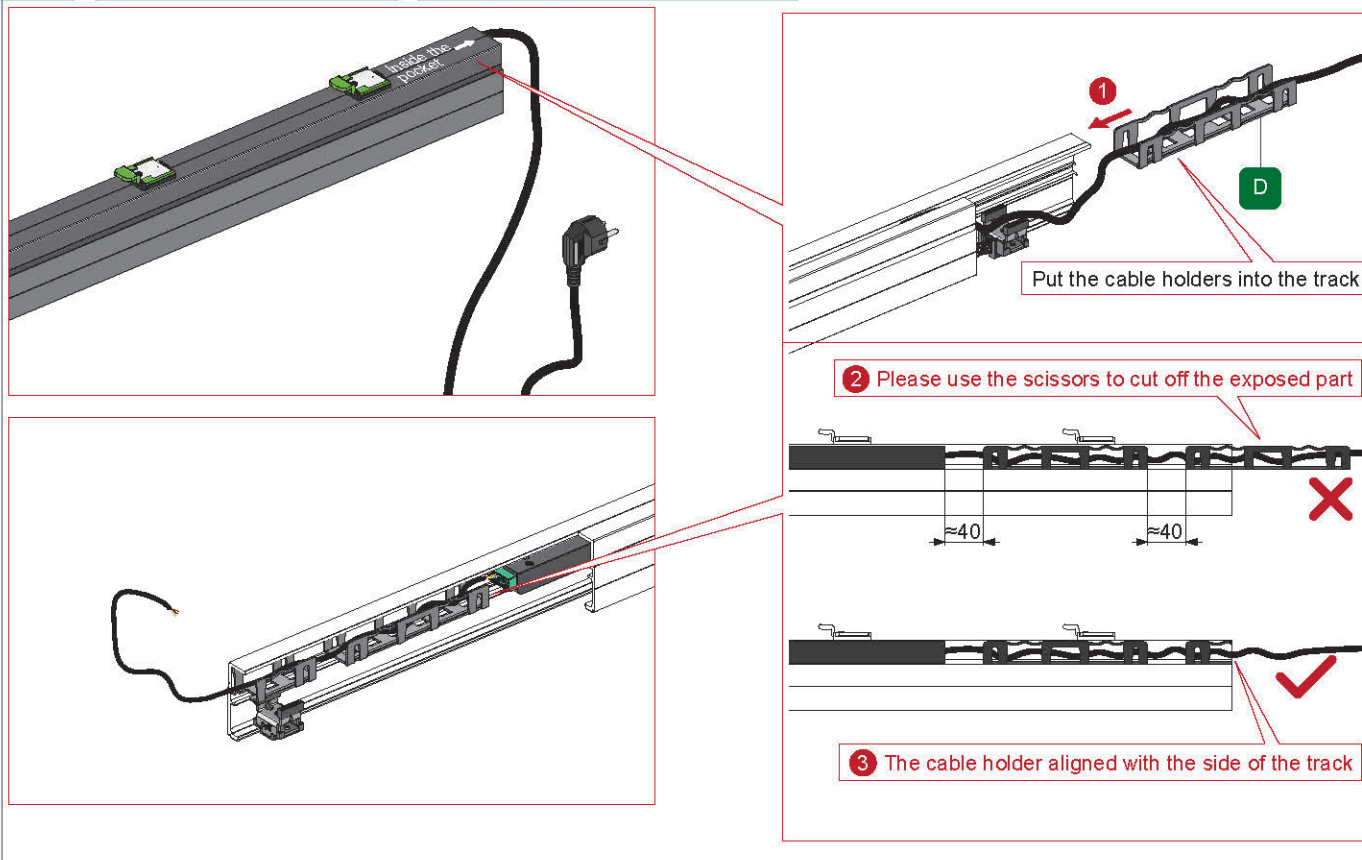

8 Install track system Single system / Schiene

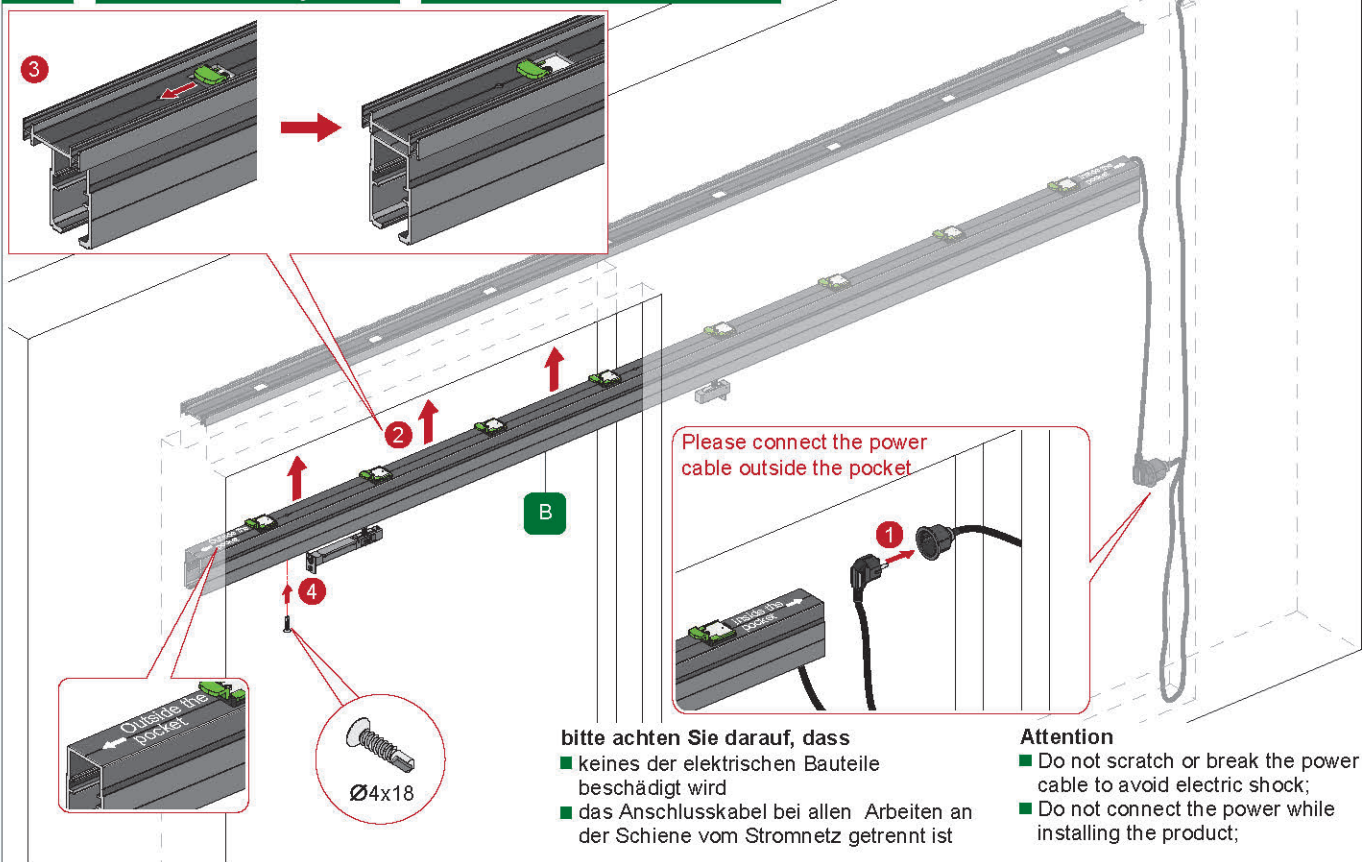


9 Double systems / Schienen (synchro system)

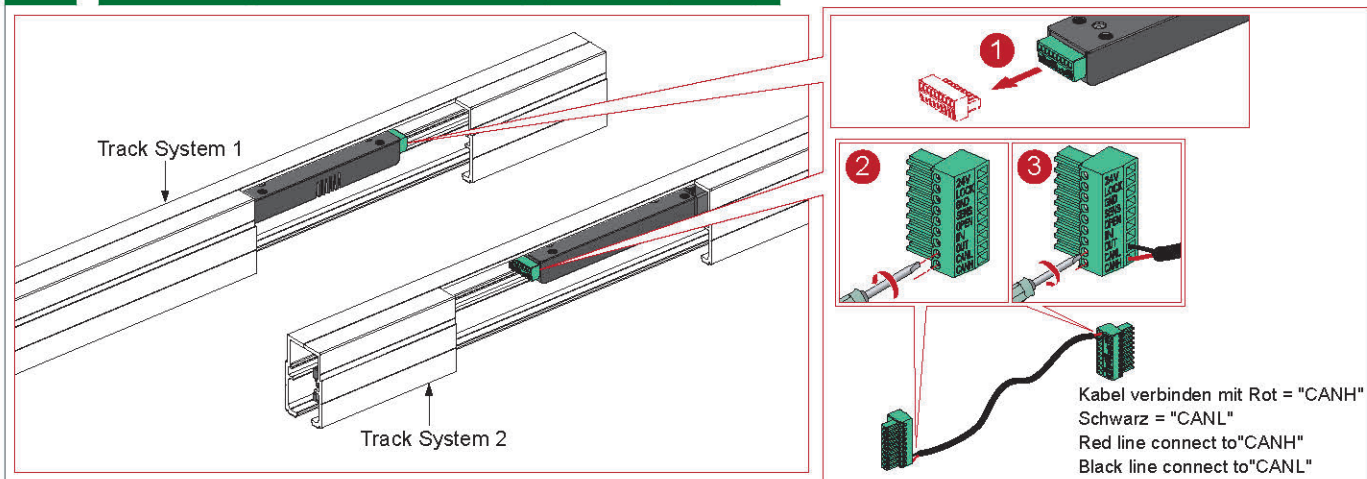

10 Double systems / Schienen (synchro system)

Install track system 1

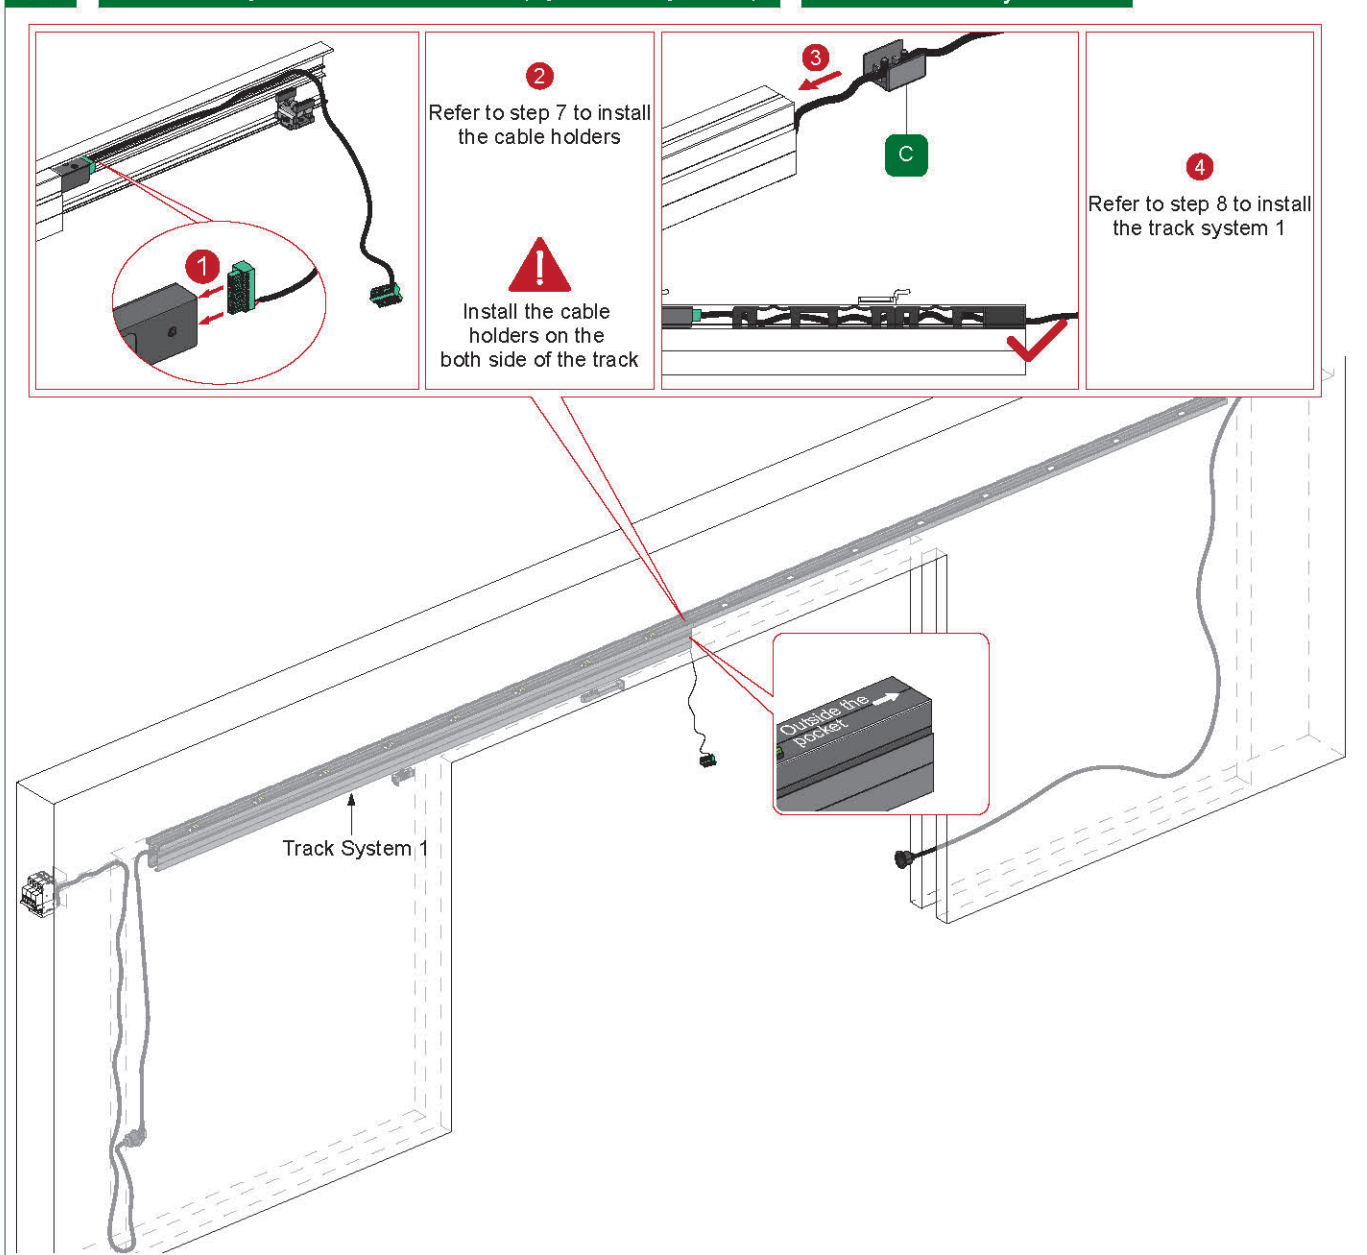

11 Double systems / Schienen (synchro system)


Install track system 2

1 Refer to step 7 to install the cable holders





Install the cable holders on the both side of the track

2 Put one connector to both tracks and fix it

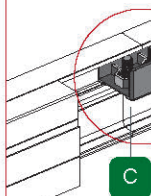


3 Refer to step 8 to install the track system 2

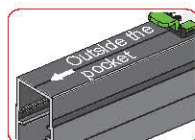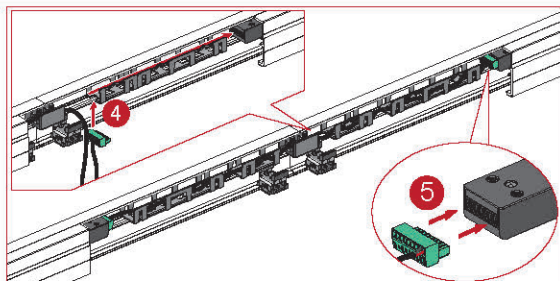


Track System 2

6 Distribute the position of the cable holders

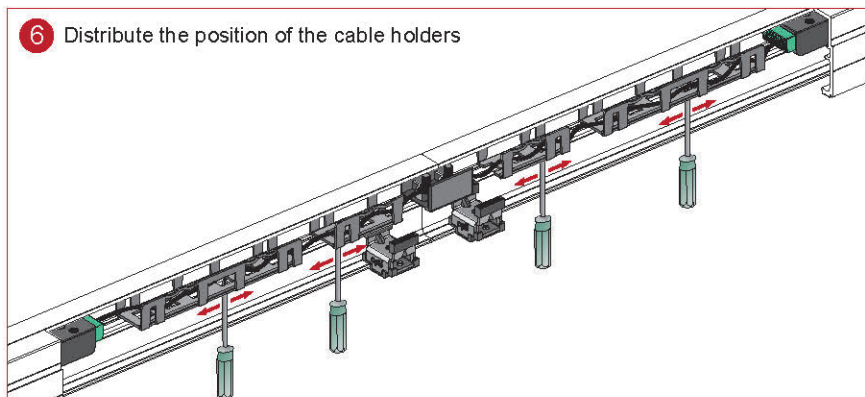

Glass door A

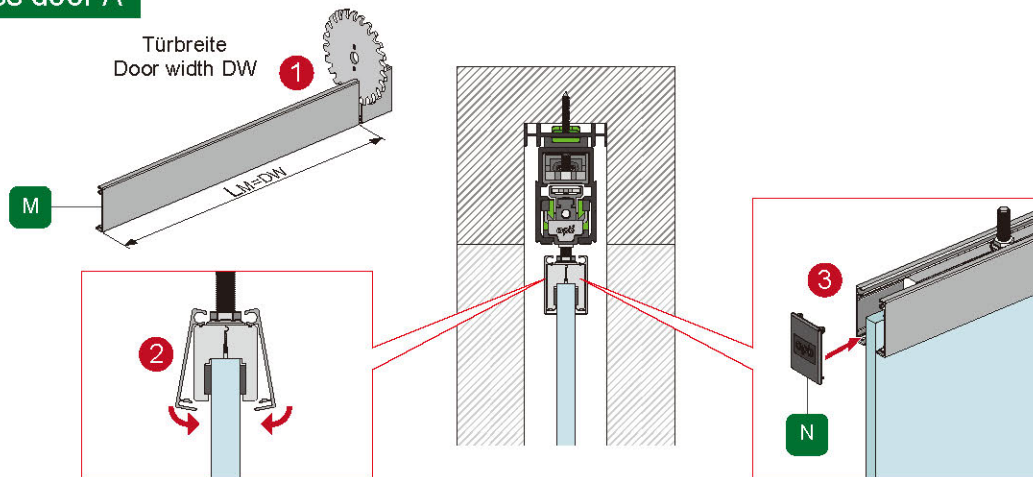

12-C	Glass door B	Door panel installation
------	--------------	-------------------------

